
Powerful 5.1ch Desktop Theater System



User's Manual

English

Copyright © 2001

All rights Reserved.

Manual edition 1.0, Jan. 2001

Welcome!

Congratulations for choosing The Edifier Ramble series Speaker Systems. It's found one of the best personal multimedia speaker system that let you enjoy completely the revolution of computer multimedia, (and/ or Audio Equipment). Before operating the system, please read this manual thoroughly and retain it for future reference.

Important Information

The information in this document is subject to change without prior notice in order to improve reliability, design and functions, and does not represent a commitment on the part of the manufacturer.

Trademarks

Edifier and **Ramble** are registered trademarks of Edifier Hi-Tech Group. And other brand names and trademarks are the property of their owners.

Opening packing: (Item Checklist)

Please check the speaker pattern marked on the packing-box (checked box before the pattern)

Please contact the seller as soon as possible if you find this speaker is not the pattern that you want.


You will find following components in the packing-box:

Component list of powerful 5.1ch desktop theater R501T

- Sub-woofer
- 5 satellite speakers
- 3 audio connecting cords (3.5 stereo plug converted to RCA)
- 3 speaker connecting cords for Left, Right and Center channels (about 2.5m)
- 2 speaker connecting cords for rear Surround channels (about 5m)
- remote controller (Model: RC15)
- 2 AAA batteries
- Operating manual


Overview:

■ Characteristics

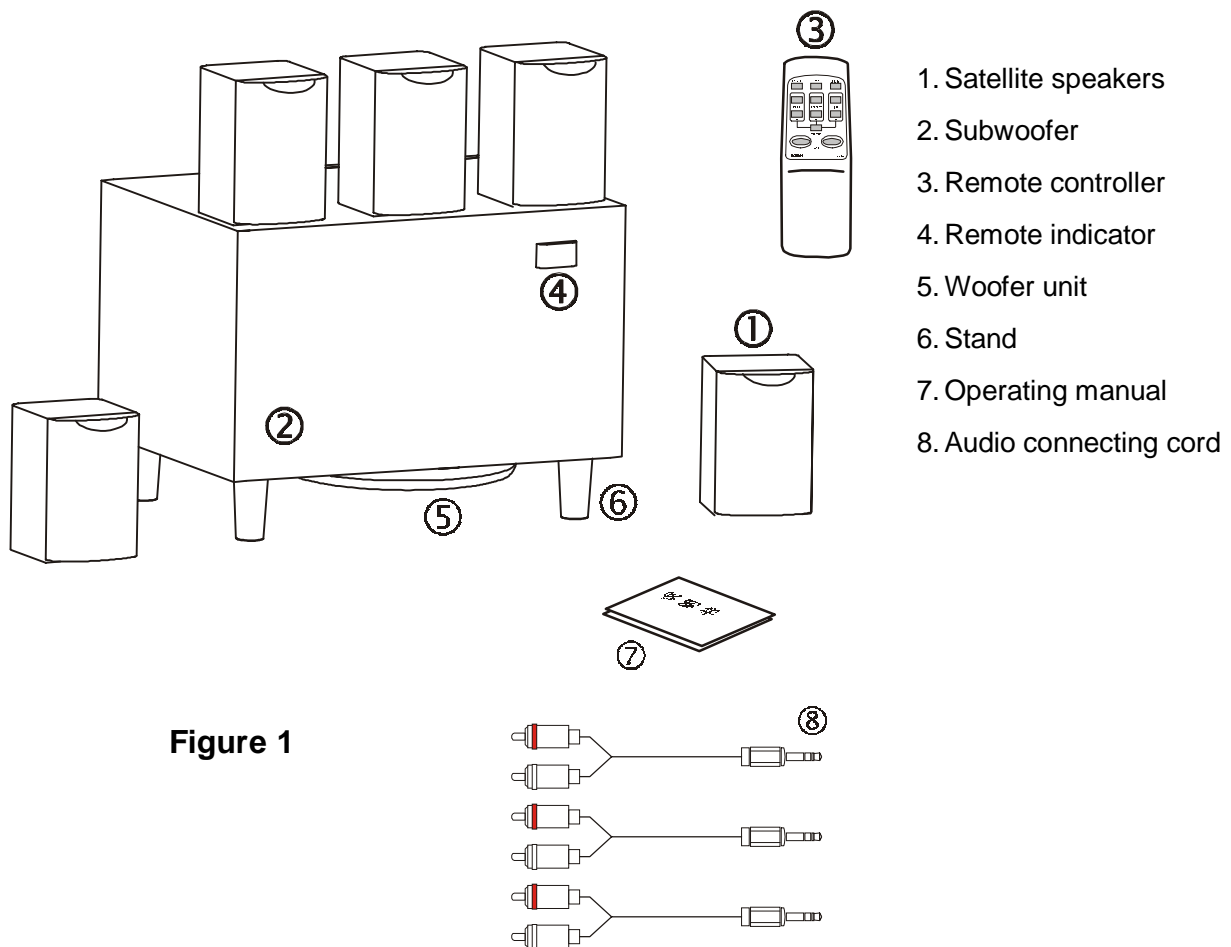

■ Introduction of back panel

All of the splints, input port, power switch and power cord concentrate on the back panel. Recognizing every parts will help you to install and use the production fast and smoothly.

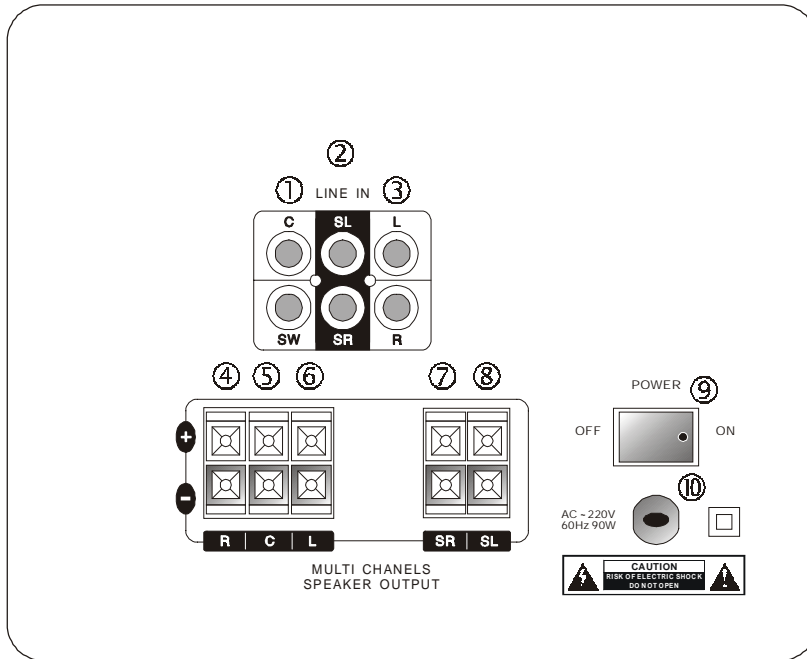

1. Input of central and bass audio signal.
2. Input of Rear-right & Rear-left surround audio signal
3. Input of right & left audio signal
4. Output to right satellite speaker
5. Output to central satellite speaker
6. Output to left satellite speaker
7. Output to Surround-right speaker
8. Output to Surround-left speaker
9. Power switch
10. Power Cord

Figure 2

■ Overview of connection

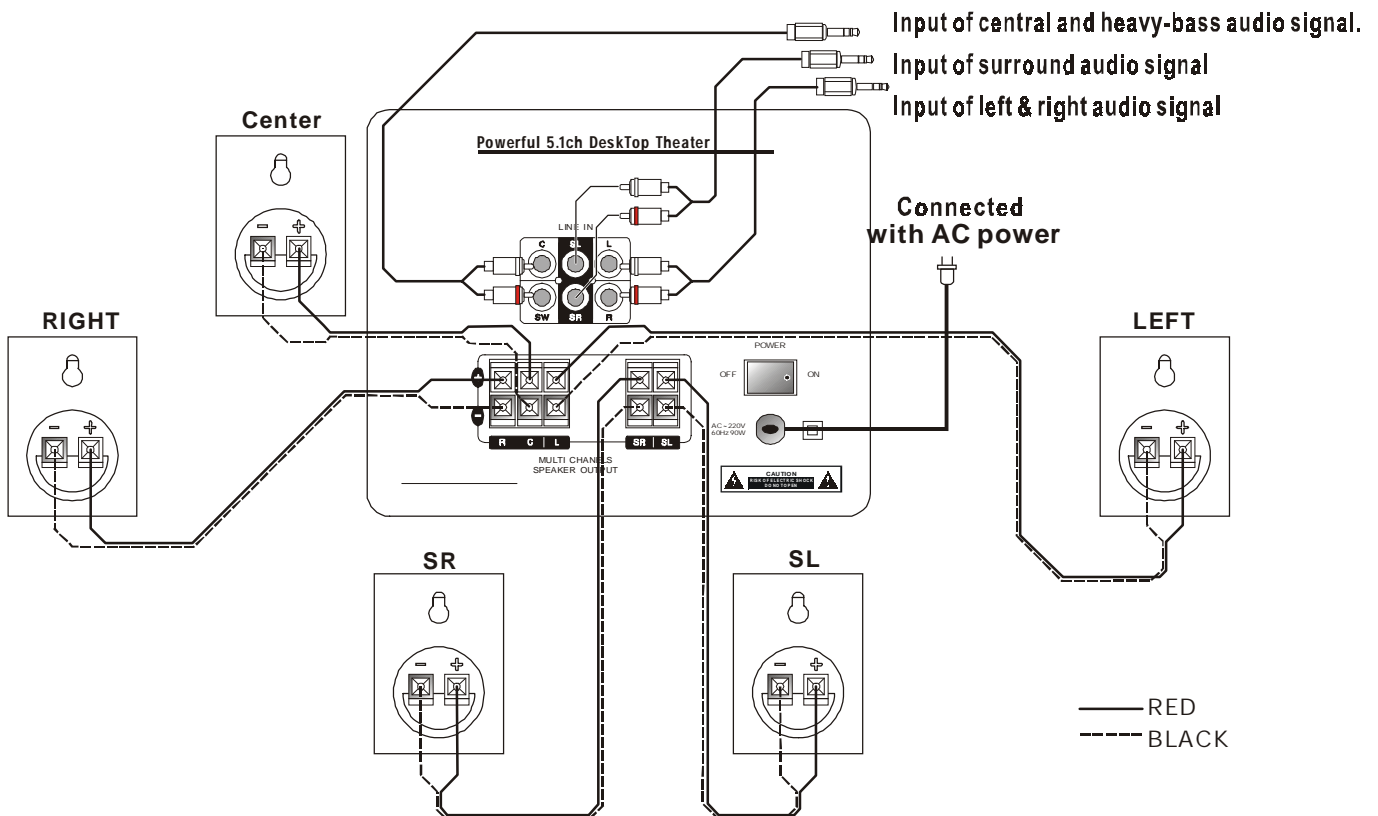


Figure 3

Operating instruction

1. CONNECTING

- (1). Close power first before connecting cords.
- (2). Connect the satellite speakers to the output splints on the back panel of the Sub-woofer. Please note to match the color, red to red and black to black.
- (3). Plug the AC power plug into the wall outlet, as shown in figure 3.

2. REMOTE CONTROLLER

The remote controller is shown in Figure 4:

- ①—**F1**: Reserved button
- ②—**Power**: power ON/OFF
- ③—**SURR**: Rear Surround channels +/-
- ④— “→•←” : Reset the SURR/CENTER/SW channels to the default setup
- ⑤—**MUTE**: Mute ON/OFF
- ⑥—**CENTER**: Center channel +/-
- ⑦—**SW**: SW channel +/-
- ⑧—**VOL**: the main volume +/-

For best performance aim the front part of the control toward the infrared detector behind the remote indicator.

The remote indicator will change or flash after receiving the launch from the remote controller.

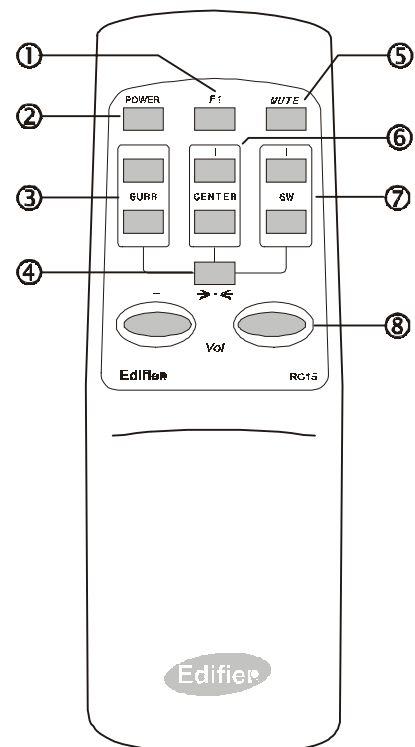


Figure 4

3. POWER

Press this button to turn power on, Press this button again to turn power off.

4. MUTE

Press this button to mute the sound. Press this button again to restore sound.

5. “→•←”

Press this button to reset the Surround/Center/Woofer volume to the default setup, and “H” is shown on the indicator.

6. VOL,SURR,CENTER,SW

Press the “vol+/-” button to increase / decrease the master volume. It can be changed from 0-9. “9” is the maximum. The volume ranks in 32 levels, so every indicating member from 0 to 9 includes 3-4 levels of volume.

Press “SURR+/-,” “CENTER+/-” and “SW+/-” button to adjust the volume level of SURROUND, CENTER and SUBWOOFER, relative to master volume. It can be changed from 0-9, and “5” is the equilibrium level.

SPECIFICATIONS

Freq. Response of Amplifier system	20Hz - 20kHz
Total Audio Output	62 Watts
PMPO	880 Watts
Input Impedance	20k Ohms
Input Ports	6 RCA

SATELLITE AMPLIFIED SPEAKERS

Drivers	Five 3.5" full range
Power	24 Watts (6 watts per driver) at 10% THD
Impedance	4 Ohms

CENTRAL AMPLIFIED SPEAKER

Drivers	One 3.5" full range
Power	8 Watts at .10% THD
Impedance	4 Ohms

SUBWOOFER

Drivers	One 8" Woofer
Power	30 Watts at .10% THD
Crossover Frequency	50Hz
Impedance	8 Ohms

POWER REQUIREMENTS

Power input	220V/90W/60Hz
-------------	---------------

DIMENSIONS

Subwoofer	395mm (W) X 296mm (D) X 296mm (H)
Satellite speakers	90mm(W)X92mm(D)X135mm(H)
Central speaker	90mm(W)X92mm(D)X135mm(H)
Total Package	454mm(W)X352mm(D)X415mm(H)

GROSS WEIGHT: 14.5 Kg

*To adapt the improvement of the function or specification of product, we keep the right to change some information without informing the clients in advance.

Safeguards

1. Do not connect the output splint of subwoofer to external amplifier.
2. Please adjust the audio to proper volume to avoid damaging your health and the system.
3. Dangerous voltages exist inside the subwoofer, do not remove the back panel.
4. Please pull out the plug and turn off the power when the product will not be used for a long time.
5. To prevent fire or shock hazard, do not expose this unit to rain, water, moisture or direct sunlight.